

NOTE # 3: Ladder Rails with Rounded profiles, such as the Werner MT series (Figure 10) require strips of foam tape (enclosed), along the outermost edges of each base unit. (See Figure 11) This tape will keep unit from rocking side to side. After tape is securely fit to edges, remove backing and position over mounting holes. Push unit carefully onto rail and mount with locknuts.

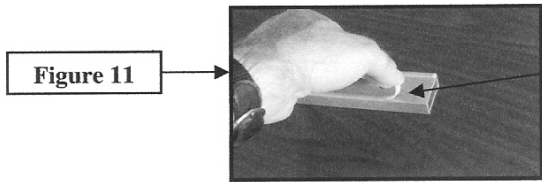


Figure 11

Lay tape down on edges. Peel backing only when ready to secure onto ladder. (For rounded rails only)

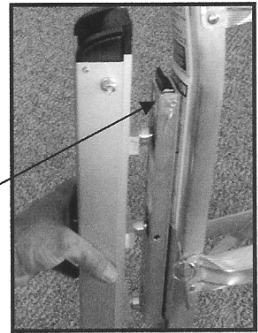


Figure 10

6.) Complete Mounting on Ladder Rail by sliding 3 mounting bolts, with all necessary spacer plates and / or thin washers, through the pre-drilled holes. **VERY IMPORTANT** - Install Base Units with “L” unit on **left** side of ladder and “R” unit on **right** side. Be sure base Unit is installed with red “UP” sticker on top. (Figure 1, 3, 10 & 12) Slide large fender washers over bolt ends and tighten the self locking nuts over them with a snug fit. Recommended torque is 9 foot pounds. Use 3/16” hex key to hold bolt head in position while tightening nut with 1/2” wrench or socket.(See Figure 12)

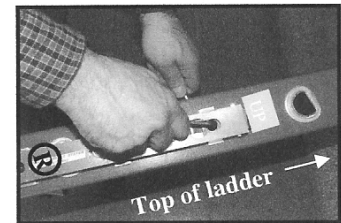


Figure 12

NOTE # 4: When Installing base units on a Type 1AA, 375 pound duty rated fiberglass ladder, the large, 2” square, steel washers must be placed under the fender washers (2 upper bolts only) before installing lock nuts.

How to Operate the Quick Connect System

1. **Pull Ring Pin** (attached to lanyard) from the hole on side of Base Unit.
2. **Position Leveler** (Figure 10 above) a few inches away from the front of the Quick Connect base unit holes. Align the 3 knobs on the back of the leveler with the 3 keyholes of the Base Unit.
3. **Insert Knobs** (See Figure 10 above) located on the back of the leveler, into the Quick Connect holes and slide leveler UP, toward the top of ladder, until it snaps into position.
4. **Push Ring Pin** back into the hole it came out of in step 1. This pin functions as a backup for your safety and the security of the leveler.
5. **Leveler is Ready** to use. See QC Leveler operation instructions for details.
6. **To Remove Leveler** (Figure 13 at right) from base unit, pull ring pin out of hole. Using index finger of one hand and holding leveler with the other hand, push on release lever, located at top of base unit. Leveler will drop down and can be pulled away from the base unit.

CAUTION: The Base Unit **MUST** be positioned so the release lever is at the top, pointing toward top of ladder. Installing the Base Unit upside down can cause the base unit latch to release while a person is on the ladder, causing serious injury.

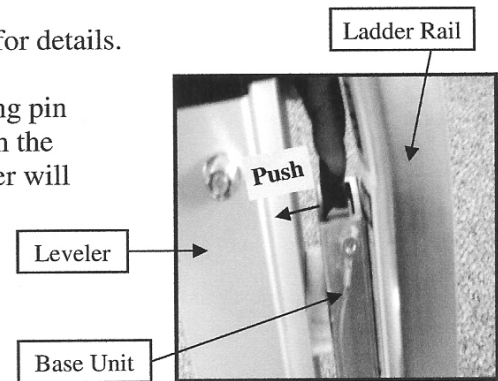


Figure 13